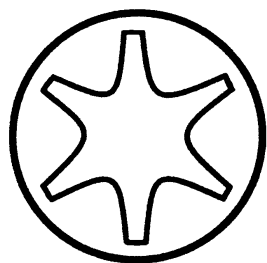
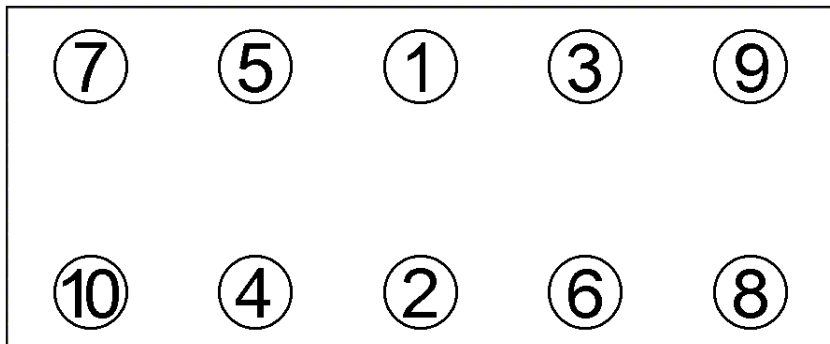


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****027.072**passend für / suitable for
adaptable à / adaptable a**Ford****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

027.850

M12x177+M12x137

Anziehen/
Tightening/
Serrage/
Apriete

⊙ M12 x 177:
20 Nm
54 Nm
➤ 90°
➤ 90°

⊙ M12 x 137:
20 Nm
54 Nm
➤ 90°
➤ 70°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

÷ 1,32 mm, Ø 86,5 mm, 3 Zähne/Teeth

Mot.: BHDA, BHDB, BHPA, C9DA, C9DB, C9DC, F9DA,

F9DB, FFDA, HCPA, HCPB, KKDA, RTN, RTP, RTQ

1,8 Ltr. TD 55-85 KW (75-115 PS)

Fiesta, Focus, Galaxy, Mondeo, Transit Connect

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

027.072