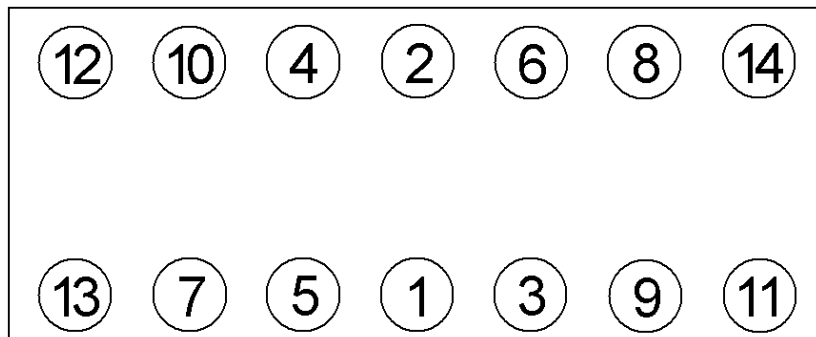


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****058.193**passend für / suitable for  
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo234.640  
M 12x1,5x217Anziehen/  
Tightening/  
Serrage/  
Apriete
 80 Nm  
 50 Nm  
 90°  
 90°

## Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Mot. M57N2 D30 02/2006&gt;

E60/E61 525d,xd, 530d,xd 535d

E63/E64 635d E65/E66 730d,Ld

E83 X3 3.0d, sd

E70 X5 3.0d, sd

E71 X6 30dX, 35dX

÷ 1,67 mm 3 Löcher, Holes, Trous, Agujeros, Fori

E90/E91/E92/E93 325d, 330d,xd, 335d

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

**\*058.193\***