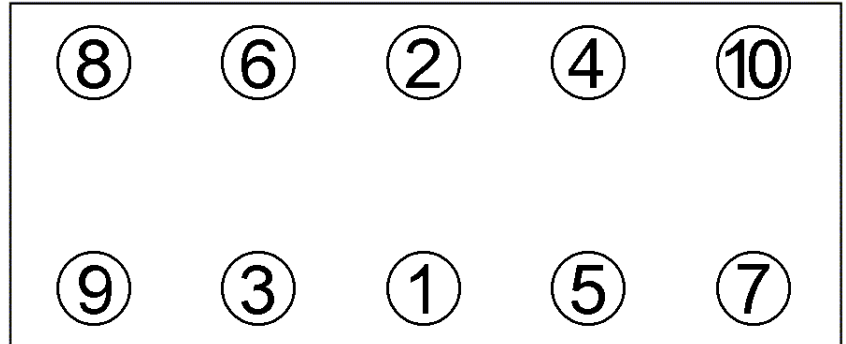
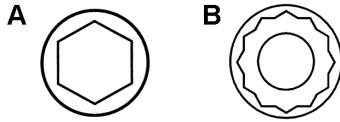


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****058.740**passend für / suitable for  
adaptable à / adaptable a**Honda****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornilloAnziehen/  
Tightening/  
Serrage/  
AprieteA  
Accord CE,CD ->1998  
Shuttle RA1 ->1998  
● 39 Nm  
69 Nm  
98 NmB  
Accord CG 1998->  
● 29 Nm  
➤ 90°  
➤ 90°  
➤ 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

÷ 0,76 mm, Ø 86 mm

Mot.: F20B2/3/5/7, F22B1/2/3/4/5/6/8/9, F22Z2/6

2,0 ltr.-2,2 ltr., 100-110 kW (136-150 PS)

Accord, Civic, Odyssey, Prelude, Shuttle

Acura CL

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/10/09

**\*058.740\***