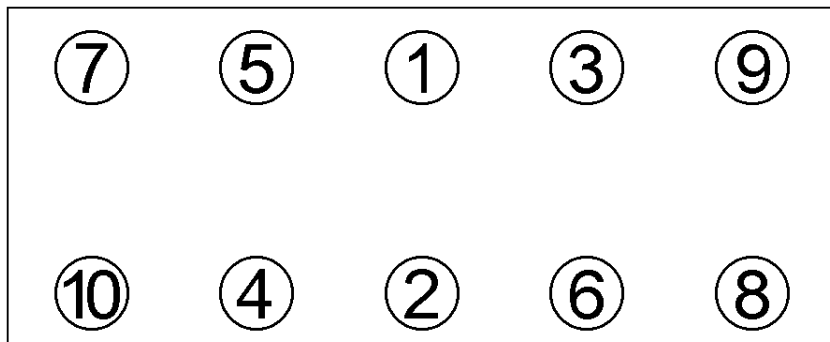


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****217.580**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo249.210
M 11x1,5x175Anziehen/
Tightening/
Serrage/
AprieteZKS 249.200
-> 11/2011
 30 Nm
 > 90°
 > 90°
 M8: 23 NmZKS 249.210
11/2011 ->
 30 Nm
 > 90°
 > 140°
 M8: 23 Nm**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
>	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Mot. N63/N63N/S63/S63T B40/B44 ÷0,75mm

F07/F10/F11 550i, iX, M5

F06/F12/F13 650i, iX, M6

F01/F02/F04 750i, Li, iX, LiX, Alpina B7, B7L, Hybrid 7

E70 X5 50iX, X5 M

E71/E72 X6 50iX, X6 M, Hybrid X6

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/10/09

217.580