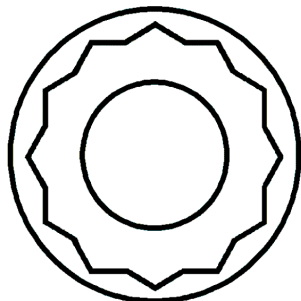
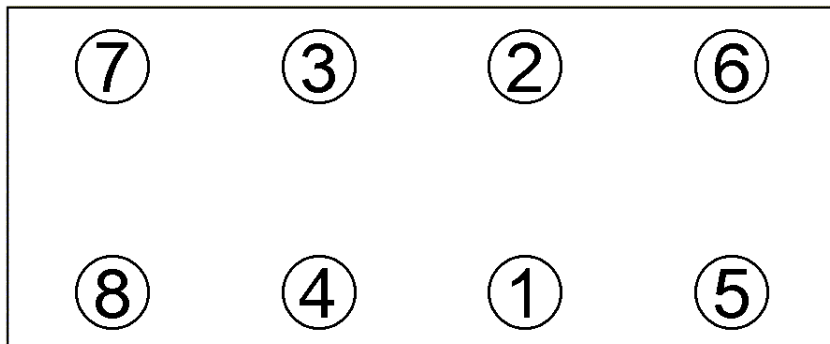


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****325.620**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo273.150
M 12x146/175Anziehen/
Tightening/
Serrage/
AprieteM12x1,5x146
● 39 Nm
➤ 110°
➤ 110°M12x1,5x175
● 39 Nm
➤ 130°
➤ 130°**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor0,65 mm / 2 holes / left side
Y30DT 3,0 ltr. CDTi V6 Diesel
Signum, Vectra C**Elring-Serviceteam**
Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

24/10/10

325.620