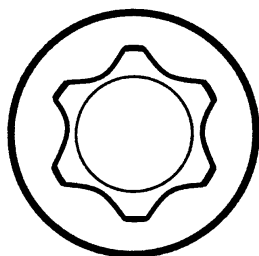
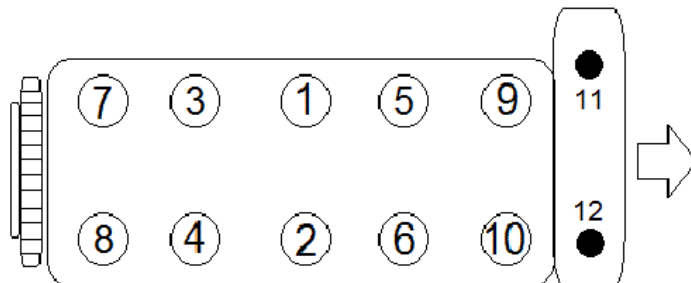


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****353.264**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo527.450
M 10x1,5x170Anziehen/
Tightening/
Serrage/
AprieteM10
● 30 Nm
> 90°
> 90°
> 45°M9
● 30 Nm
> 90°
entfällt
> 45°Pos. 11/12 M9
● 10 Nm
> 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
>	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø 84,8mm ÷ 0,5mm

E81/E82/E87/E88 116i, 118i, 120i

E90/E91/E92/E93 316i, 318i, 320i

E60/61 520i, Li

E83 X3 2.0i E84 X1 18i

E85 Z4 2.0i

Mot. N43/N45N/N46/N46N B16/B20 02/2007>

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

23/11/14

353.264