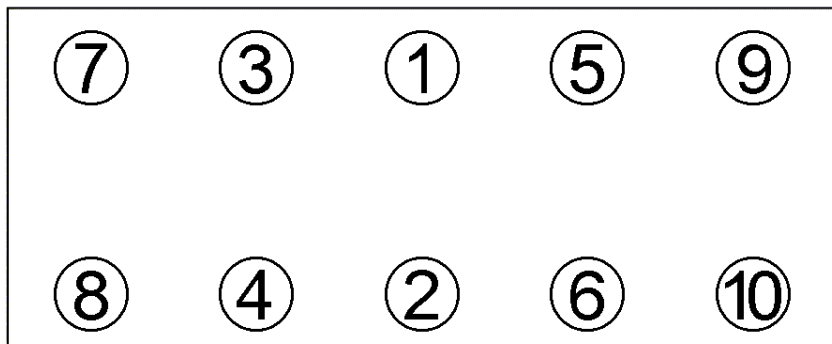
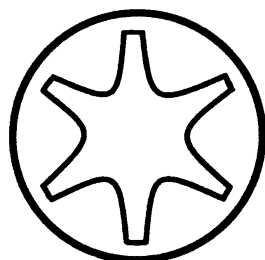


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****356.380**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

| | |
|-------------|---------|
| Anziehen/ | ⊙ 65 Nm |
| Tightening/ | ➤ 90° |
| Serrage/ | ➤ 90° |
| Apriete | ➤ 90° |
| | ➤ 90° |

Zeichenerklärung / Explanations / Explication / Explicacion

| | | | | |
|---|---------------------------------------------|------------------------------|--------------------------------|---------------------------------------|
| | neue Zylinderkopfschrauben verwenden | use new cylinder head bolts | utiliser des vis neuves | emplar tornillos nuevos |
| * | Warmlauf (80°C) | warm up time (80°C) | chauffage (80°C) | calentamiento (80°C) |
| | Schrauben einzeln lösen und wieder anziehen | loosen and tighten each bolt | deserrer et serrer vis par vis | aflojar y apretar tornillo a tornillo |
| ● | Setzzeit | relaxation time | durée de tassement | tiempo de espera |
| ➤ | Drehwinkel | torque angle | angle de serrage | ángulo de giro |

Motortyp / Engine type / Type de moteur / Tipo de motor

OPEL
2,0 ltr. Diesel
D20DTR
Insignia B

Mot :

Elring-Serviceteam
Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

24/10/10

356.380