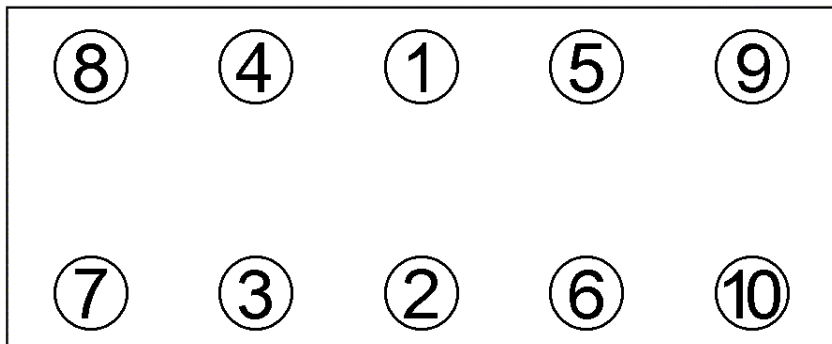


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****436.651**passend für / suitable for  
adaptable à / adaptable a**PSA****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo**A****B**

758.280

M 11x1,5x175

Anziehen/  
Tightening/  
Serrage/  
Apriete**A:**

- 60 Nm
- 20 Nm + 120°
- 15 min
- 120 min
- 20 Nm + 120°

**B:**

- 60 Nm
- 20 Nm + 300°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ø: 84,5 mm; ÷: 1,48 mm

Mot: XU5M/J/JA/S/CP/JP, XU5 1C/2C

XU7JB/JP, XU9S/J/JA/J4, XU9 2C

1,6-1,9 ltr.

53-116 kW (72-157 PS)

BX, ZX, Xantia, Xsara, ab 07/1987&gt;

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

**\*436.651\***