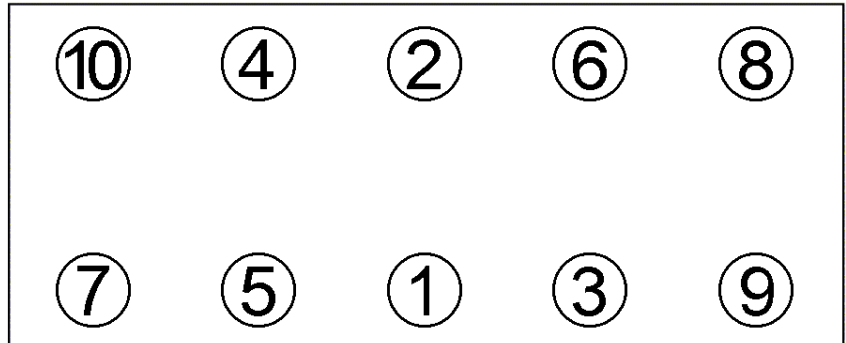


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****814.262**passend für / suitable for
adaptable à / adaptable a**Ford****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo820.490
M 10x1,5x135

| | |
|-------------|--------------|
| Anziehen/ | ⊙ 20 - 40 Nm |
| Tightening/ | ⊙ 40 - 60 Nm |
| Serrage/ | ➤ 90° |
| Apriete | ➤ 90° |

Zeichenerklärung / Explanations / Explication / Explicacion

| | | | | |
|---|---|------------------------------|--------------------------------|---------------------------------------|
| | neue Zylinderkopfschrauben verwenden | use new cylinder head bolts | utiliser des vis neuves | emplar tornillos nuevos |
| * | Warmlauf (80°C) | warm up time (80°C) | chauffage (80°C) | calentamiento (80°C) |
| | Schrauben einzeln lösen und wieder anziehen | loosen and tighten each bolt | deserrer et serrer vis par vis | aflojar y apretar tornillo a tornillo |
| ● | Setzzeit | relaxation time | durée de tassement | tiempo de espera |
| ➤ | Drehwinkel | torque angle | angle de serrage | ángulo de giro |

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 83,0 mm, ÷: 1,70 mm

Mot: JGA, JPA, JPC, L4B, L6B, LJA, LJB, LJC, LJD

LJE, LJF, LP1, LP2, LP3, LPA, LR1LR2, LRA

LRB, LUA, LUB, LUC, LUD, LUG, LUH, LUJ, LUK

1,3/1,6 ltr. HL/CFI/EFI/CVH

Fiesta, Escort, Orion

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/10/10

814.262