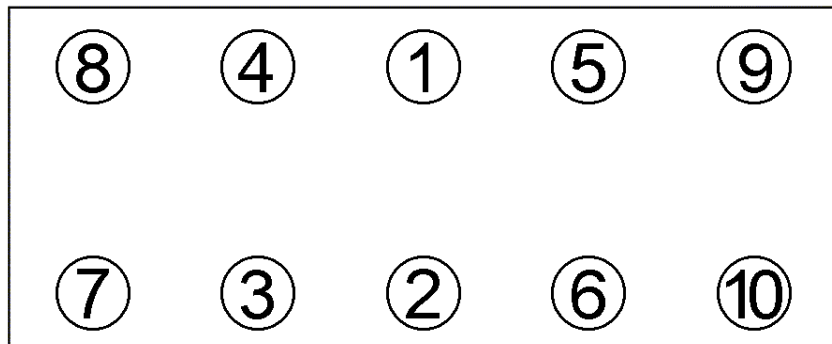
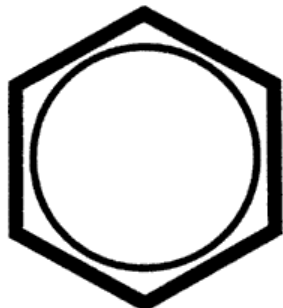


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****984.321**passend für / suitable for  
adaptable à / adaptable a**PSA****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornilloAnziehen/  
Tightening/  
Serrage/  
Apriete

Mot. XW, XY  
 50 Nm  
 78 Nm  
 15 min  
 120 min  
 78 Nm

Mot. XZ  
 40 Nm  
 55 Nm  
 12 min  
 120 min  
 55 Nm

**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

76 mm Ø, 1,27 mm ÷, centr. 14 mm Ø

Mot. XW7,109,XY6/7,150A/B/C/J

BX 11,14	7/1985>	104	1983>1987
LNA	11/1985>1986	205	1983>1987
Visa	1986>		
C 15	1986>	Samba	11/1985>1986

**Elring-Serviceteam**Fon +49 7123 724 799  
Fax +49 7123 724 798  
[service@elring.de](mailto:service@elring.de)

24/01/22

**\*984.321\***