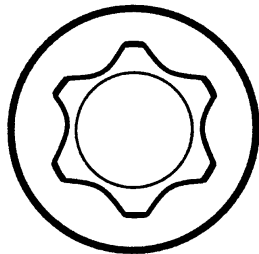


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****123.022**passend für / suitable for  
adaptable à / adaptable a**Citroën/Peugeot/Renault****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornilloAnziehen/  
Tightening/  
Serrage/  
Apriete

20 Nm

15 Nm

225°

**Zeichenerklärung / Explanations / Explication / Explicacion**

|   |   |                              |                                |                                       |
|---|---|------------------------------|--------------------------------|---------------------------------------|
|   | neue Zylinderkopfschrauben verwenden        | use new cylinder head bolts  | utiliser des vis neuves        | emplar tornillos nuevos               |
| * | Warmlauf (80°C)                             | warm up time (80°C)          | chauffage (80°C)               | calentamiento (80°C)                  |
|   | Schrauben einzeln lösen und wieder anziehen | loosen and tighten each bolt | deserrer et serrer vis par vis | aflojar y apretar tornillo a tornillo |
| ● | Setzzeit                                    | relaxation time              | durée de tassement             | tiempo de espera                      |
| ➤ | Drehwinkel                                  | torque angle                 | angle de serrage               | ángulo de giro                        |

**Motortyp / Engine type / Type de moteur / Tipo de motor**

÷ 0,74 mm, Ø 89 mm, links/left/gauche/izquierda

Mot.: ES9J4S, ES9A, XFV, XFW, XFX,

L7X 710, 721, 731-733, 760

3,0 Ltr. V6 150-166 KW

C5, C6, C8, Ulysse, Phedra, 406, 807

Avantime, Clio

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

[service@elring.de](mailto:service@elring.de)

24/10/09

**\*123.022\***