

# Anziehvorschrift Zylinderkopf

# Tightening Instructions for Cylinder Head

# Instructions de serrage pour culasse

# Prescripciones de apriete para culatas


308.073

passend für / suitable for  
adaptable à / adaptable a




Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo

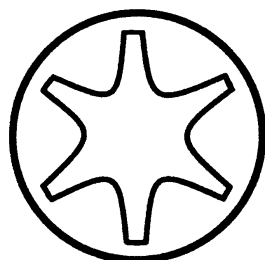

872.290  
M 12x1,5x140

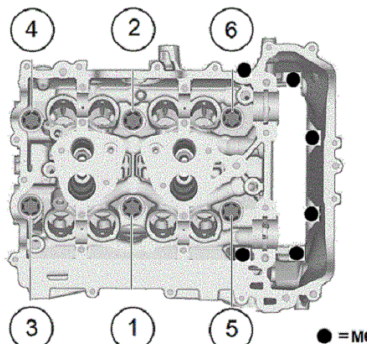

Anziehen/  
Tightening/  
Serrage/  
Apriete

- M12 x 1,5 x 140
- ⊙ 5 Nm
- 50 Nm
- 360° lösen / loosen
- 4 Nm
- 12 Nm
- 65°
- 60°
- 65°
- 60°

- M6 x 65
- ⊙ 5 Nm
- 70°
- M6 x 25
- ⊙ 5 Nm
- 45°

## Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

## Motortyp / Engine type / Type de moteur / Tipo de motor

2,5 Cyl. 3-4 / Ø 104,3 mm

Mot. 257 KW (350 PS)

718 Boxster S

718 Cayman S

### Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

**\*308.073\***