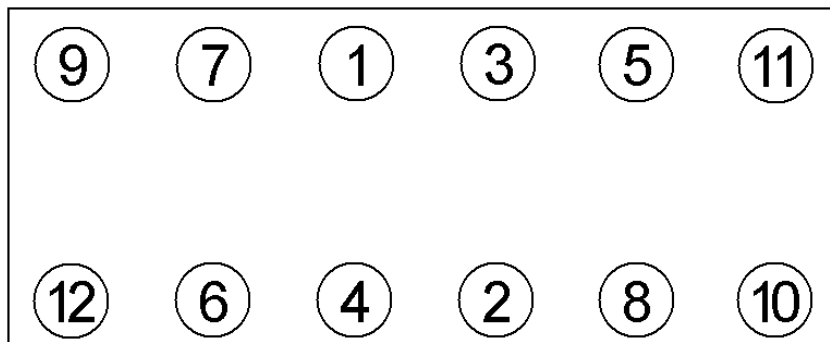


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****187.690**passend für / suitable for  
adaptable à / adaptable a**Fiat****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo

152.760

M 12x1,25x218

Anziehen/  
Tightening/  
Serrage/  
Apriete

Fiat:  
 20 Nm  
 65 Nm  
 > 90°  
 > 90°  
 > 90°

Lancia:  
 65 Nm  
 > 90°  
 > 90°  
 > 90°

**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
>	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

83 mm Ø      1,70 mm ÷      1 Loch

Mot:      182.A2.000, 838.A3.000, 838.A7.000

2,4 TD

Marea      ab 1996 &gt;

Kappa      07/1996 &gt; 10/2001

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

**\*187.690\***