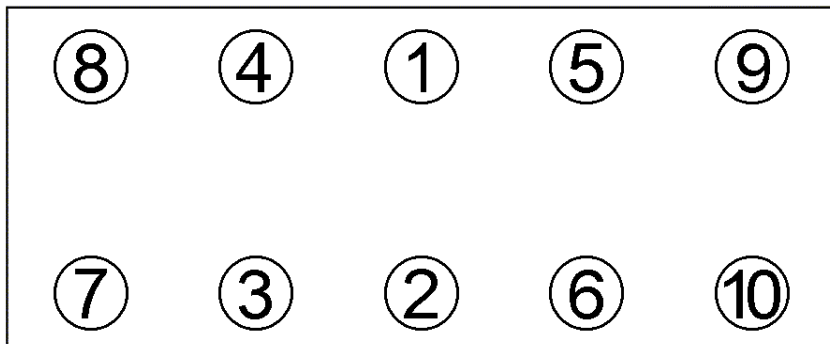


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****586.587**passend für / suitable for  
adaptable à / adaptable a**Saab****Das Original**Schraubenkopf / Head shape    Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo221.330  
M 12 x 122Anziehen/  
Tightening/  
Serrage/  
AprieteHEX 15 mm, TORX  
 60 Nm  
 80 Nm  
 > 90°HEX 17 mm  
 60 Nm  
 95 Nm  
 \* 15 min  
 ● 30 min  
 □ 95 Nm

## Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
>	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Mot. 4 Cyl. 1985 ccm, 73 kW (100 PS)

B 201 79 kW (108 PS)Vergaser

B 201 85 kW (115 PS)Injection

107 kW (145 PS)

Saab 90, 99 GL, 900 GL, GLS

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

**\*586.587\***